Front and rear heated seat with and without steering wheel heater

From 2002 m. y.

4 - Pin Relay Carrier with threaded connection

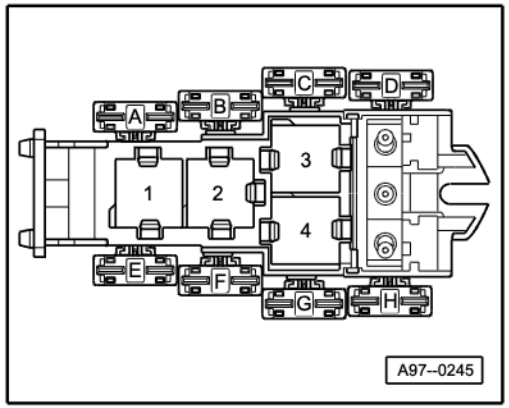

Fuse holder

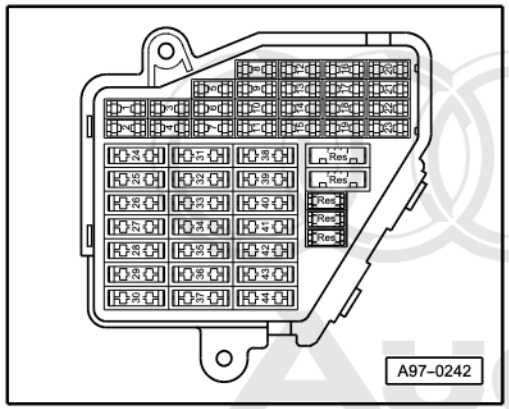

Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse Colors

30 A - Green
25 A - White
20 A - Yellow
15 A - Blue
10 A - Red

7,5A - Orange
5A - Beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

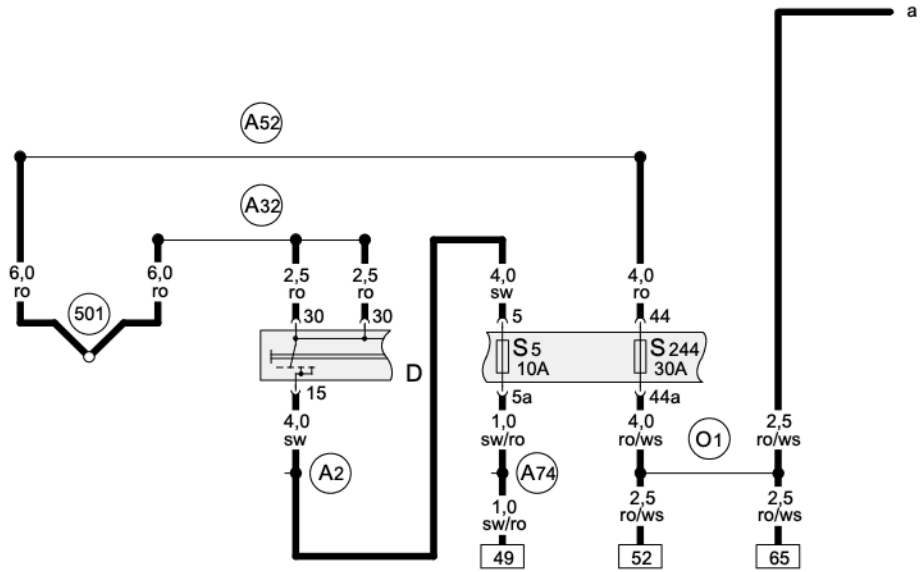

Fuses

D	Ignition/Starter Switch
S5	Fuse in fuse holder/relay panel
S244	Fuse in fuse holder
501	Threaded connection -2- (30), on the relay plate
A2	Plus connection (15), in instrument panel wiring harness
A32	Plus connection (30), in instrument panel wiring harness
A52	Plus connection -2- (30), in instrument panel wiring harness
A74	Connector (15a, fuse 5), in instrument panel wiring harness
O1	Plus connection (30), in heated seats wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness and completeness of this document. © Copyright AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

1 2 3 4 5 6 7 8 9 10 11 12 13 14

97-55899

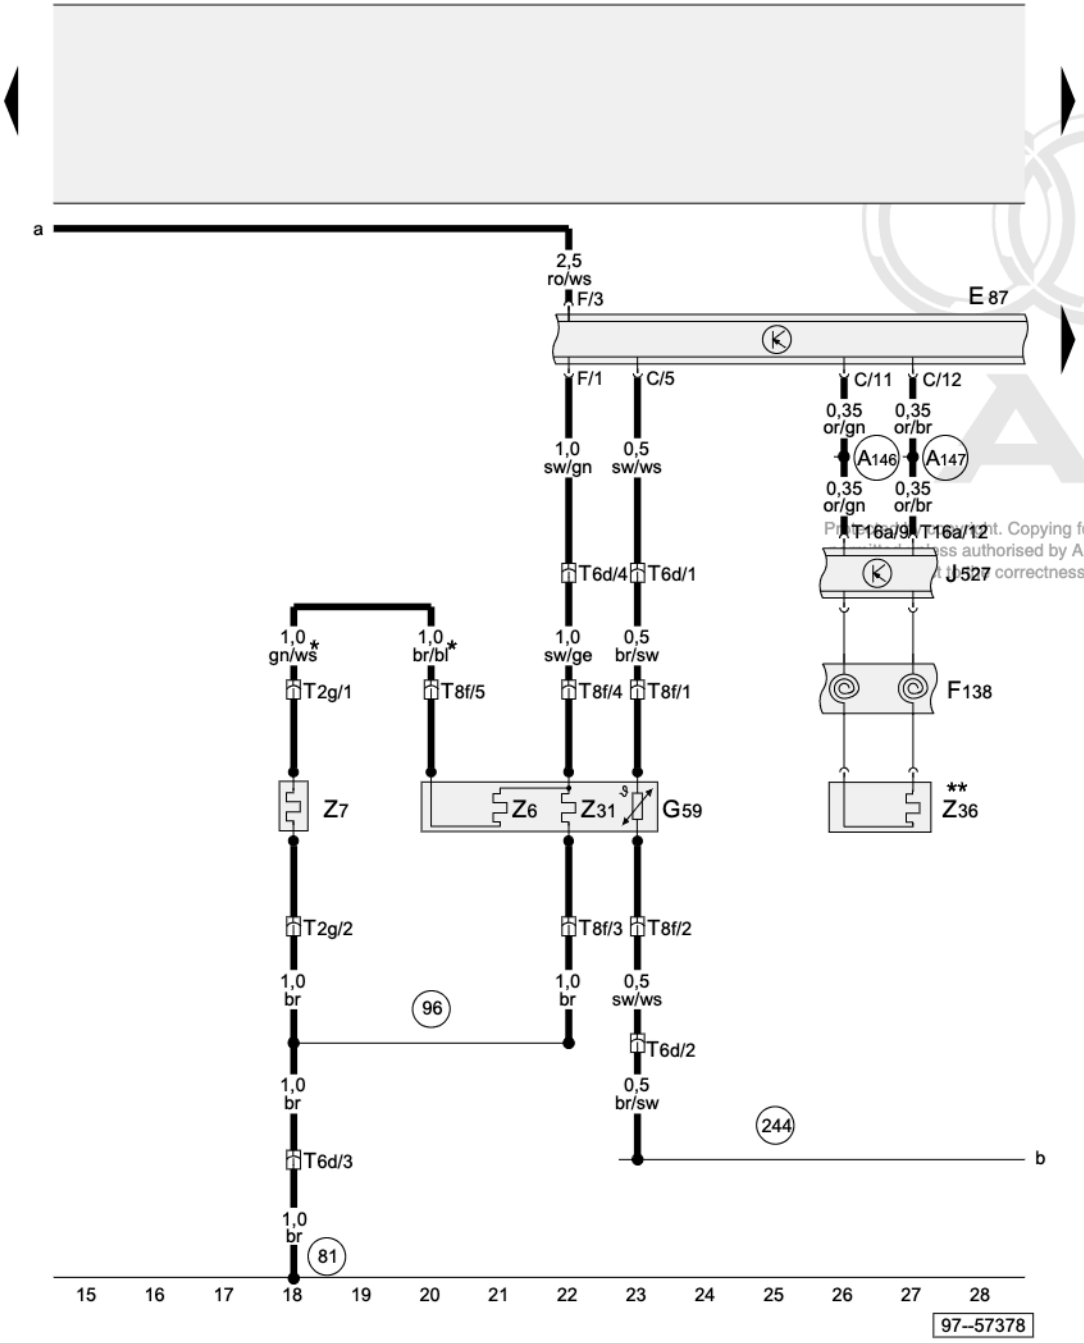

Driver's Seat Heating Element, Heater steering wheel

E87	A/C Control Head
F138	Airbag Spiral Spring/Return Spring With Slip Ring
G59	Driver's Heated Seat Temperature Sensor
J527	Steering Column Electronic Systems Control Module
T2g	Double Connector, on driver's Seat for driver's Backrest Heating Element
T6d	6-Pin Connector, green, seat wiring connector station, driver seat
T8f	8-Pin Connector, on driver's seat for driver's driver's seat Heating Element
T16a	16-Pin Connector, black, on steering Column Electronic Systems Control Module
Z6	Driver's Seat Heating Element
Z7	Driver's Backrest Heating Element
Z31	Driver's Seat Side Bolster Heater
Z36	Heater steering wheel
81	Ground connection -1-, in instrument panel wiring harness
96	Ground connection -1-, in heated seats wiring harness
244	Ground connection (sensor Ground), in wiring harness Climatronic
A146	Comfort System High-bus Connection (in instrument panel wiring harness)
A147	Comfort System Low-bus Connection (in instrument panel wiring harness)
*	both is possible
**	with Heater steering wheel only

Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

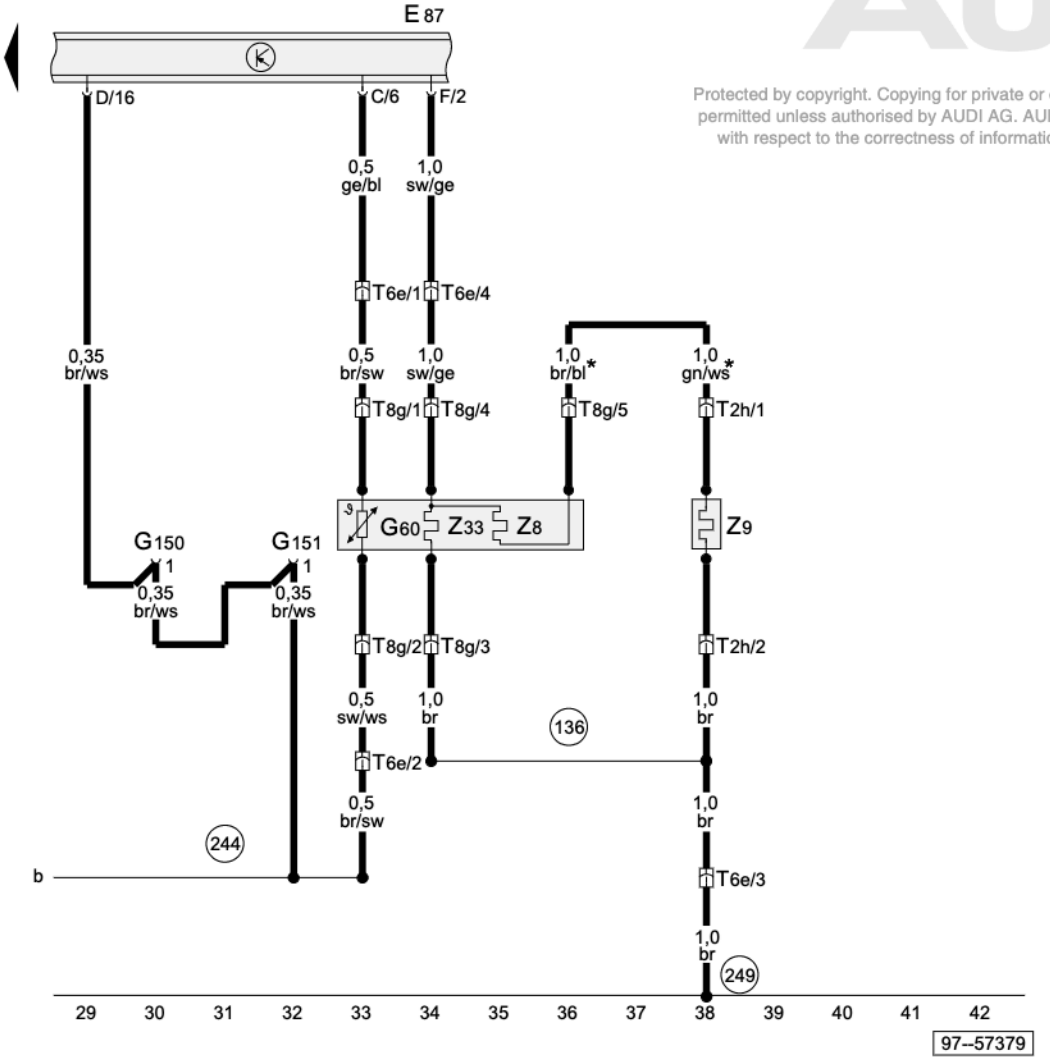

Passenger's Seat Heating Element

E87	A/C Control Head
G60	Passenger's Heated Seat Temperature Sensor
G150	Left Vent Temperature Sensor
G151	Right Vent Temperature Sensor
T2h	Double Connector, black, on passenger's Seat for driver's Backrest Heating Element
T6e	6-Pin Connector, green, seat wiring connector station, passenger seat
T8g	8-Pin Connector, on passenger's seat for passenger's seat Heating Element
Z8	Passenger's Seat Heating Element
Z9	Passenger's Backrest Heating Element
Z33	Passenger's Seat Side Bolster Heater
136	Ground connection -2-, in heated seats wiring harness
244	Ground connection (sensor Ground), in wiring harness Climatronic
249	Ground connection -2-, in wiring harness interior
*	both is possible

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

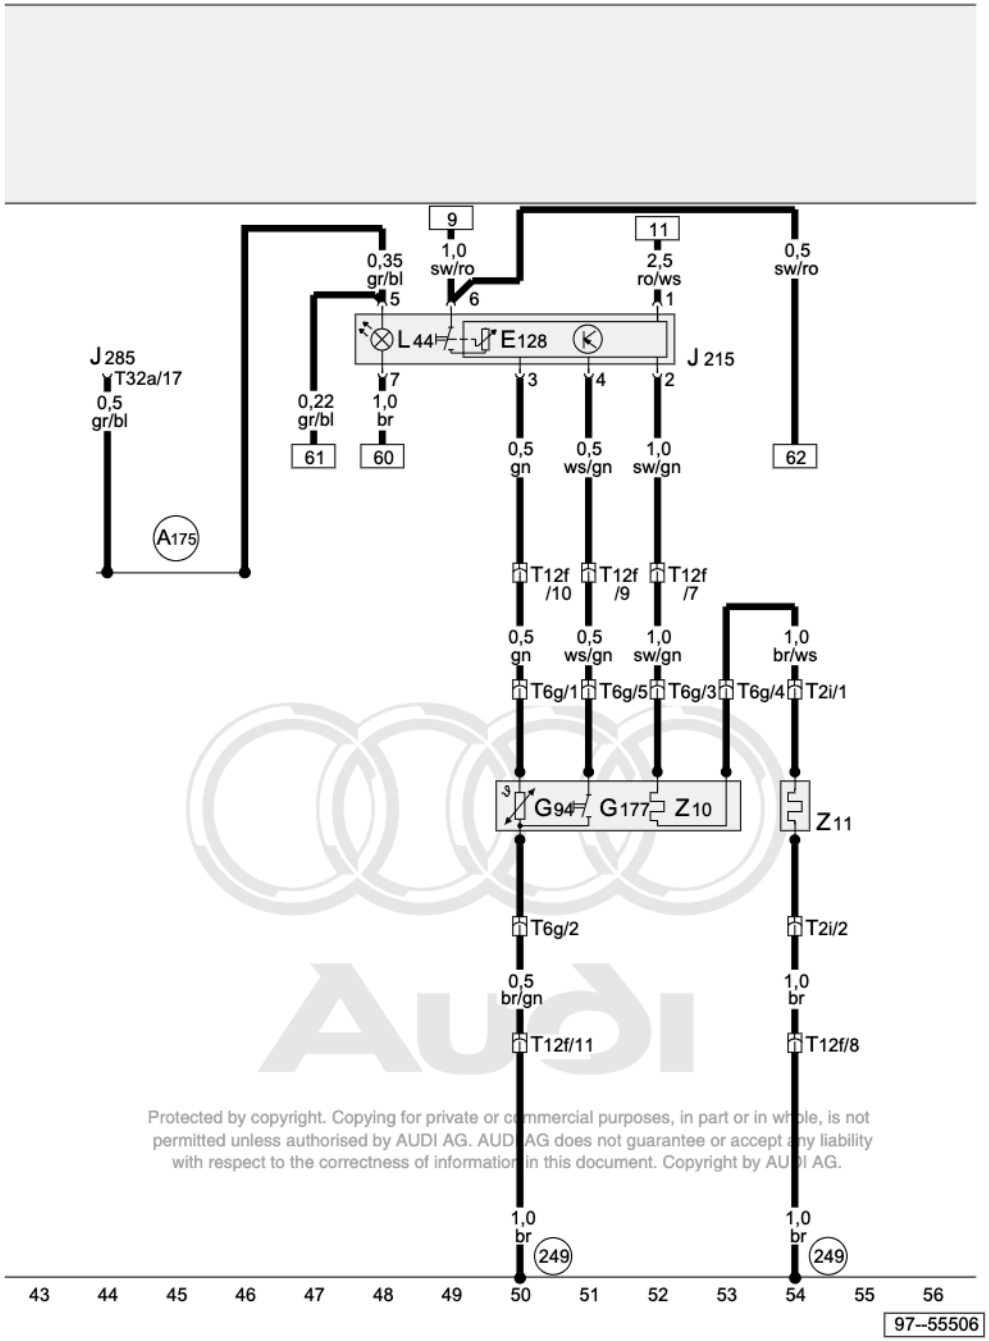

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Left Rear Seat Heating Element

E128	Left Rear Heated Seat Regulating Switch
G94	Left Rear Heated Seat Temperature Sensor
G177	Sensor for occupied sensor seat, rear driver side
J215	Left Rear Heated Seat Control Module
J285	Control module with indicator unit in instrument panel insert
L44	Heated Seat Switch Illumination Light
T2i	Double Connector, left Rear Backrest Heating Element
T6g	6-Pin Connector, on the left Rear Seat Element
T12f	12-Pin Connector, black, under Rear Seat Element
T32a	32-Pin Connector, green, on instrument panel insert
Z10	Left Rear Seat Heating Element
Z11	Left Rear Backrest Heating Element
249	Ground connection -2-, in wiring harness interior
A175	Wire connection (58s), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

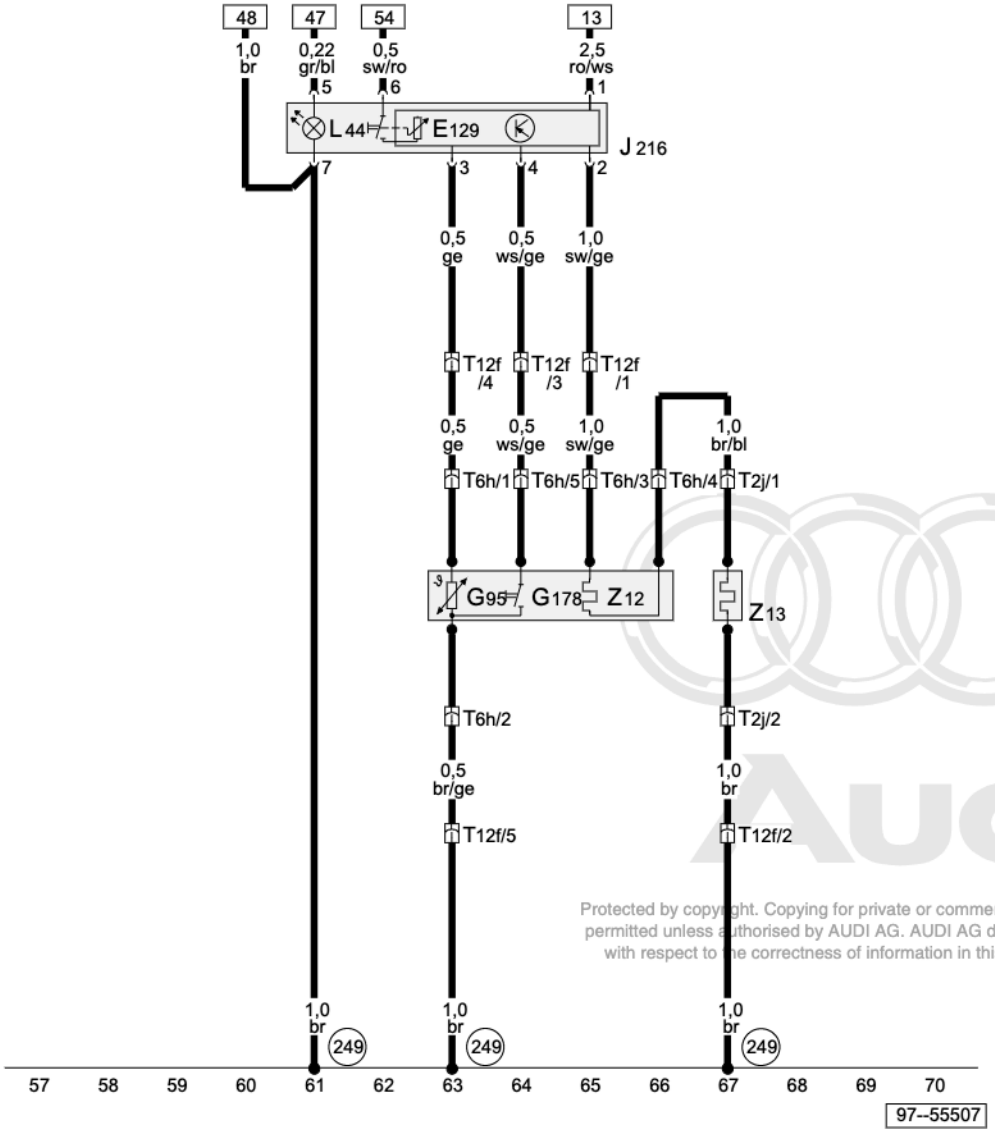

Right Rear Seat Heating Element

E129	Right Rear Heated Seat Regulating Switch
G95	Left Rear Heated Seat Temperature Sensor
G178	Sensor for occupied seat, rear, passenger side
J216	Right Rear Heated Seat Control Module
L44	Heated Seat Switch Illumination Light
T2j	Double Connector, right Rear Backrest Heating Element
T6h	6-Pin Connector, on the right Rear Seat Element
T12f	12-Pin Connector, black, under Rear Seat Element
Z12	Right Rear Seat Heating Element
Z13	Right Rear Backrest Heating Element
249	Ground connection -2-, in wiring harness interior

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.